



# POWERWISE QUICK INSTALL GUIDE


## INGATE GATEWAY MODBUS & ZIGBEE

### What you will need:

1. PowerWise inGate Gateway
2. 12 - 30 VDC Power Supply
3. Ethernet Cable or Wifi Bridge (not included)
4. Laptop/Tablet/Phone




### Wiring:

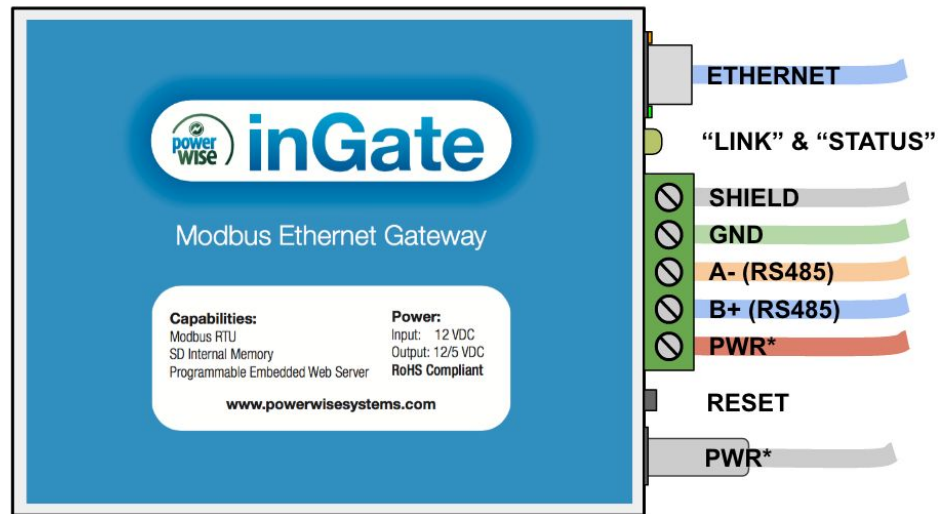

\* DC power terminals are interconnected. Do not connect to multiple power sources.

### LIGHTING INDICATORS

<b>NORMAL</b> Successful communication with servers.	<b>BAD COMMS</b> No communication. Check ethernet cable and router.	<b>INTERNAL ERROR</b> Call support for help diagnosing error. 207-370-6517
---	--	---

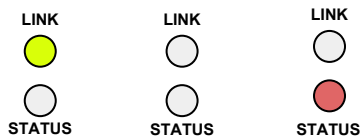

### NEXT STEPS:

- Review RS-485 & Zigbee connection diagrams at [www.powerwisesystems.com/support](http://www.powerwisesystems.com/support).
- Register new user and location at the following address: [dashboard.intellergy.us](http://dashboard.intellergy.us)